

# VIBXPERT® II

## Short instructions





# **VIBXPERT® II**

**FFT data collector**

**Signal analyzer**

**Field balancer**

## Short instructions



Version 3.2x  
Edition April 2012  
LIT 53.102.EN



## Contents

Safety notes.....	4
Symbols used.....	4
Intended use.....	4
General safety notes.....	5
Environmental influences.....	5
Description.....	6
Overview.....	6
Keyboard.....	7
LED display.....	8
Power supply.....	9
Connection to the PC.....	10
Connection to the printer.....	11
Operation.....	12
Basic functions.....	12
Examples for typical operation procedures.....	13
Off-route measurement ('Multimode').....	16
Route measurement.....	18
Measuring with a machine template.....	20
Measuring a route with VIBCODE.....	22

### About this manual

This short instruction manual is intended to provide a handy day-to-day reference for the most important functions of the instrument and basic program operation procedures.

For truly complete information, however, the full-length VIBXPART II operating manual (LIT 53.201.EN) contains detailed explanations of all functional features as well as considerable background information on condition monitoring.

The operation of the optional 'Balancing' module is described in the 'VIBXPART II - Balancing' operating manual (LIT 53.202.EN).

## Safety notes

### Symbols used



Attention!

Warning of operating errors that can lead to data loss or equipment damage.



Note

Information and tips on operating the data collector.

### Intended use

- The measurement device may only be used for the measurement of machine signals in industrial environments while taking into consideration the technical specifications.
- Transducers and cables may be used only for their respective intended uses as defined in the corresponding sales leaflets.

Any other use shall not be considered an intended use and is impermissible. Incorrect or impermissible use and failure to observe the instructions in this manual result in a loss of warranty from PRÜFTECHNIK.

## General safety notes

The following notes must be carefully read and completely understood before the device is put into service.

- During measurement on machines with rotating parts exposed, ensure that no brackets, cables etc. can become caught in rotating machine parts. Danger of injury!
- The measurement device may only be operated if it is undamaged, dry and clean.
- Operation and maintenance are to be performed only by properly trained personnel.
- Repairs to the device may be carried out only by a PRÜFTECHNIK-authorized service technician.
- Only original spare parts and accessories may be used.
- Only properly functioning, regularly-maintained electrical equipment may be used. Any defects such as broken plugs or loose sockets must be corrected immediately. Damaged cables must be replaced by an authorized service technician.
- Any alterations that affect device design or operating safety are not permitted.

## Environmental influences

- Portable radio-based devices can interfere with proper functioning of the device when operated nearby. In case of doubt, check the connecting cable between the device and its transducer.
- Avoid exposing the device, its transducers and cables to environmental conditions that exceed the tolerances listed in the 'Technical Data sheets'.
- Keep the protective caps on the connector sockets when they are not in use to keep them clean.

## Description

### Overview

① **Full color display** - large, backlit, high-contrast.

② **Light sensor** controls key board illumination.

③ **LEDs** indicate:

- Alarm condition
- Measurement error
- Battery charge status.

④ **Keyboard** can be comfortably operated with the thumb.



⑤ **A / B** - Measuring channels for analog signals and charging sockets.

⑥ **Temperature** - interface for thermo couple type K

⑦ **Digital input / analog output** for:


- Trigger / RPM sensor
- Data transfer via RS 232
- Headphone / Oscilloscope
- Strobe control

⑧ **Communication** via Ethernet / USB






## Keyboard

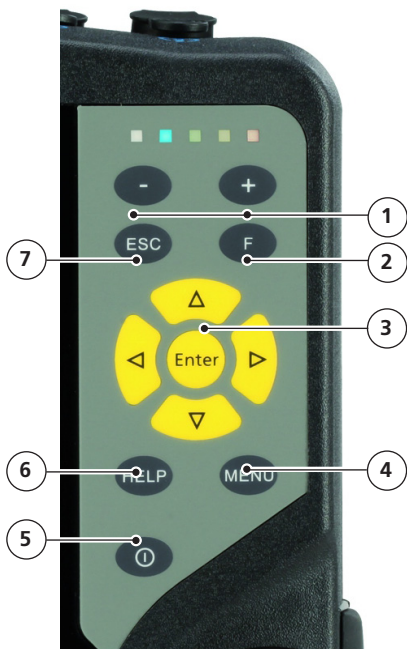

- ① **Plus (+) / Minus (-) key**
  - Zoom for X axis
  - Change tab
- ② **F key** for special functions such as tab, fast menu, search,...
- ③ **Navigation keys and Enter key**
- ④ **MENU key** opens the menu with context-sensitive functions
- ⑤ **On/Off key** for switching on, switching off and restarting VIBXPert.
- ⑥ **HELP key** opens context-sensitive help page.
- ⑦ **ESC key** is used to cancel an operation, to page back and to switch off VIBXPert in the start screen.

## LED display

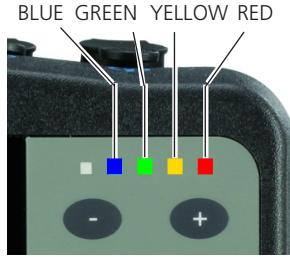

### Status indication during measurement

LED	RED <span style="color: red;">■</span>	YELLOW <span style="color: yellow;">■</span>	GREEN <span style="color: green;">■</span>	BLUE <span style="color: blue;">■</span>
<b>constant</b>	Alarm	Warning	Prewarning	Meas. OK
<b>flashing slow</b>	Signal overload	Signal unstable	Display off/ Measur. incomplete	Battery almost empty
<b>flashing fast</b>	Battery empty (when switching on)		Trigger signal	

Flashing LEDs have the higher priority.

Examples:

Signal overloads and exceeds the alarm level => RED flashes.


Signal unstable and exceeds the alarm level => YELLOW flashes.

### Battery status during charging

LED	RED <span style="color: red;">■</span>	YELLOW <span style="color: yellow;">■</span>	GREEN <span style="color: green;">■</span>	BLUE <span style="color: blue;">■</span>
<b>constant</b>	Error	Battery charging	Battery full	---


## Power supply

VIBXPERT is supplied with energy by a Lithium-Ion rechargeable battery. With the power on the battery icon on the display indicates the residual charge of the battery.

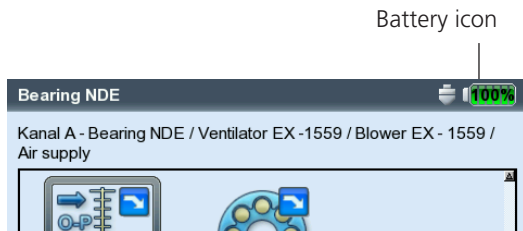

If the battery is almost empty, a message appears on the display and the blue LED flashes. The battery can be charged either in the device or in the external charging station (option, VIB 5.324) using the VIBXPERT charger (VIB 5.320-INT).





Follow the safety notes enclosed with the charger.

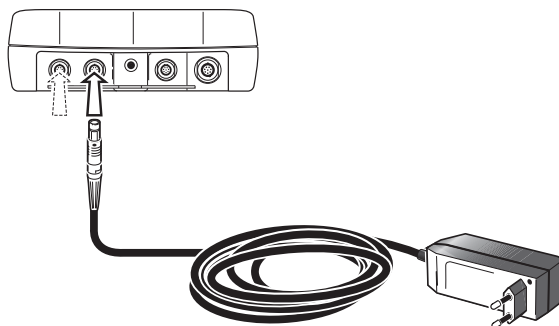


Connect the VIBXPERT charger either to channel A or to channel B.

## Connection to the PC


### Direct connection

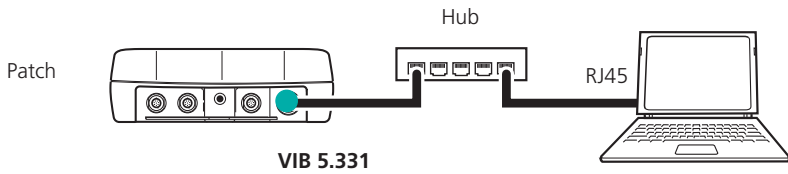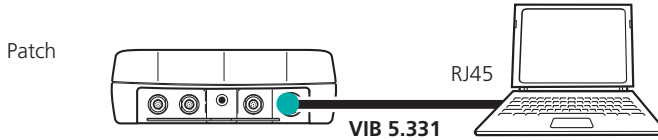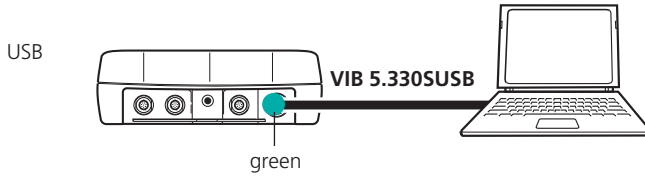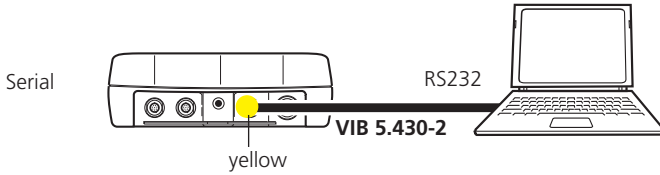

### Connection via a network

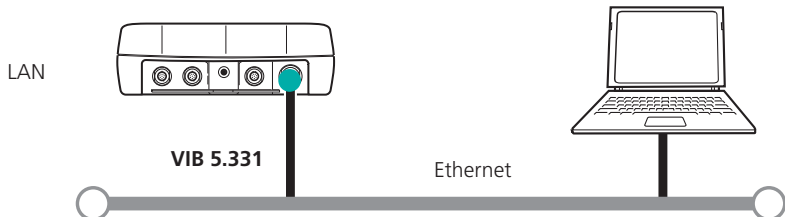

## Connection to the printer

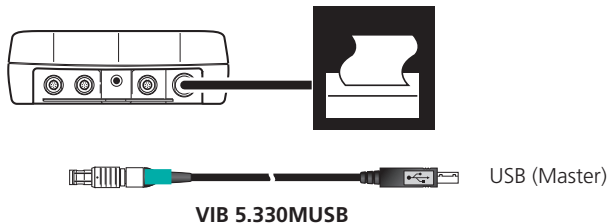

## Generating a report

VIBXPRT can generate the following report types:

*Screenshot:* Contains the content of the current screen.

*Measurement report:* Contains the measurement results and information on the operator and measurement.

*Route/template report:* Contains the results and, if applicable, the exceeded thresholds of a route/template and general data on the measurement tasks.

The reports can be printed directly to a USB-printer or to a PDF file. The PDF file can be stored on a USB pendrive. Using the 'VIBXPRT utility' tool the PDF file can be copied to a PC and printed from there.

Details on configuring the measurement report in the device, selecting the PDF printer and transferring PDF files to a PC can be found in the VIBXPRT operating manual (art. no.: LIT 53.201.EN).









**Note**

## Measurement report in Excel format

With the VIBXPRT utility from version 1.4.2, all results can be exported to Excel format. The results are documented as numerical value and shown graphically in a diagram.


## Operation


### Basic functions

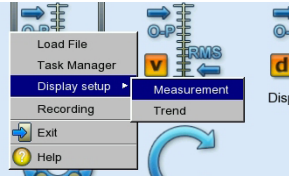	<p>Switching on, switching off, resetting VIBXPRT.</p>	<p>Switching on:</p> <ul style="list-style-type: none"><li>• Hold the key down for 2 seconds.</li><li>• The start screen appears after approx. 30 seconds.</li></ul> <p>Switching off:</p> <ul style="list-style-type: none"><li>• Hold the key down for 2 seconds.</li><li>• Confirm the query to switch off with 'YES'.</li></ul> <p>Resetting:</p> <ul style="list-style-type: none"><li>• Hold the key down for 5 seconds until the device switches off and restarts.</li></ul>
	<p>Move the cursor.</p>	<ul style="list-style-type: none"><li>• Press the respective navigation key.</li></ul>
	<p>Confirm selection.</p>	<ul style="list-style-type: none"><li>• Press the Enter key.</li></ul>
	<p>Open the 'Menu'.</p>	 <p>The functions of the current program section are found in the 'Menu'.</p>
	<p>Cancel operation and close current screen.</p>	<ul style="list-style-type: none"><li>• Only in the start screen: Switch off device.</li></ul>


## Examples for typical operation procedures


### Example 1: How to change the setting in a field


 Select the respective field.

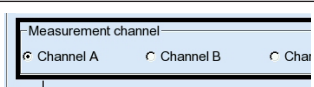


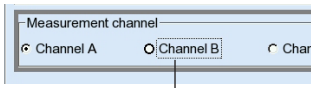
Black frame


 Confirm selection and start edit mode.

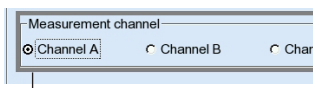


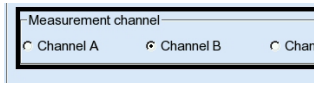
Grey frame (edit mode)


 Select new setting.






Selection has dotted frame.


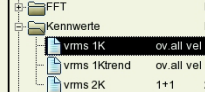

 Save new setting.






The Edit mode is closed. The cursor can be moved over the entire screen again.

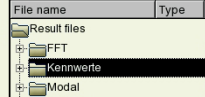

**Example 2: How to navigate in a tree view** (File manager,...)




 	Select a tree node in the same hierarchy.	
--	---	---


	Open the parent node and show the child nodes.	
---	--	---




**Example 3: How to enter numbers** (Time, Date, IP address,...)

 	Select the respective field.	
--	------------------------------	---

	Enter Edit mode.	
---	------------------	---

 	Increase / decrease value.	
---	----------------------------	--


	Select next value.	
---	--------------------	---

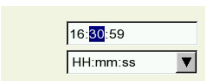 	Increase / decrease value.	
--	----------------------------	---

	Confirm changes and exit edit mode.	
---	-------------------------------------	---




**Example 4: How to enter a text** (name, comment, ...)




Select the respective character.


- Changing character table -> 0.1
- Deleting text -> 0.2
- Special characters (, + /) are not allowed in a file name

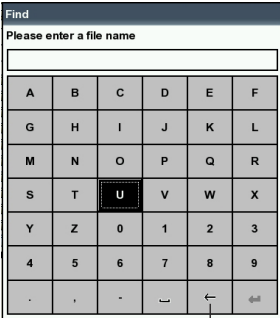


Backspace 'key'




Confirm selection, and enter the next character.

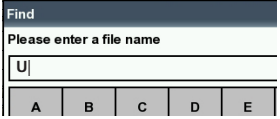




Finally save the text.

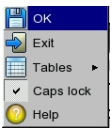



0.1 Changing character table:



0.2 Deleting text:


- Position the cursor in the text field.
- Delete the character left to the cursor with the Backspace 'key'




  







## Off-route measurement ('Multimode')


	Switch on VIBXPRT.	<ul style="list-style-type: none"> <li>• see section 'Basic functions', p. 12.</li> </ul>
---	--------------------	---

	Start 'Multimode'.	
---	--------------------	---

	Open tab for overall, signal or advanced measurements.	
---	--	---

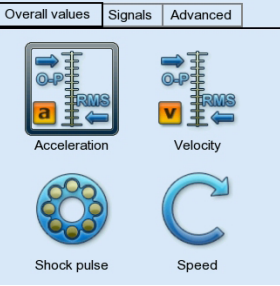	Select measurement icon.	 <ul style="list-style-type: none"> <li>• Changing the meas. task -&gt; 1.1</li> <li>• New / edit task -&gt; 1.2</li> <li>• Connecting the sensor -&gt; 1.3</li> </ul>
---	--------------------------	--

	Start measurement.	<ul style="list-style-type: none"> <li>• Sensor connection is checked, if sensor detection is enabled.</li> <li>• Green LED is flashing during meas: Trigger OK.</li> <li>• Blue LED lights up after the meas.: Measurement OK.</li> <li>• Live mode: Keep the Enter key pressed when the measurement starts.</li> <li>• Repeating the measurement -&gt; 1.4</li> </ul>
---	--------------------	---

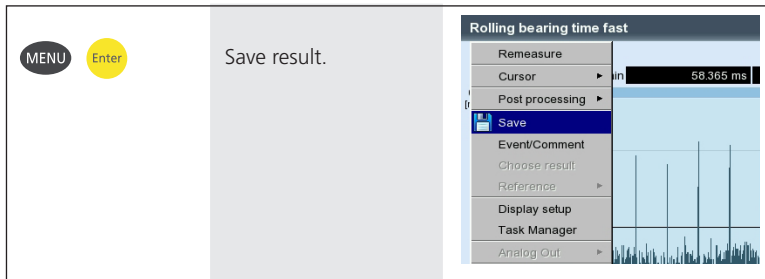

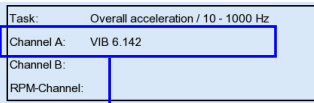





1.1 Changing the measurement task:

1.2 New task / edit task:

1.3 Sensor and measurement channel are displayed in the info field.

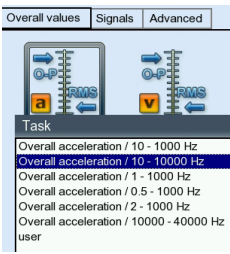






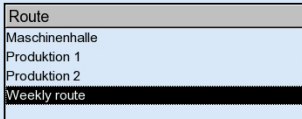



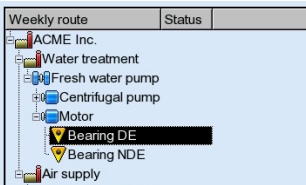

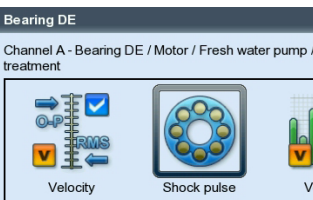
1.4 Repeating the measurement:  
In the measurement screen press 'Enter' twice.




**Note**

## Route measurement

	Switch on VIBXPRT.	<ul style="list-style-type: none"> <li>• see section 'Basic functions', p. 12.</li> </ul>
 	Start 'Route' mode.	 <p>Route</p>
  	Select route.	 <ul style="list-style-type: none"> <li>• Prerequisite: Route contains <u>no</u> VIB-CODE location.</li> </ul>
  	Select measurement location.	 <ul style="list-style-type: none"> <li>• Change view: tree or list -&gt; 2.1</li> <li>• No meas. location in tree view visible? -&gt; 2.2</li> <li>• Skip route element -&gt; 2.3</li> </ul>
	Select measurement icon.	 <ul style="list-style-type: none"> <li>• Reference measurement must be carried out first.</li> <li>• Skip task -&gt; 2.3</li> <li>• Connecting the sensor -&gt; 1.3 (p. 17)</li> </ul>




Start measurement.

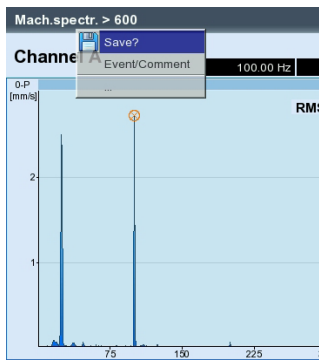


- Meas. tasks with the same sensor are performed automatically one after the other.
- Results are saved automatically, if 'AutoSave' is enabled (-> 2.4).
- 'Route is finished' appears, if all measurements have been completed.

2.1 Route view mode:

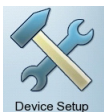


Note


2.2 Show meas. locations in tree view:

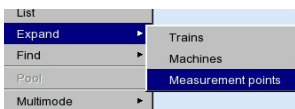


2.3 Skip element (considered to be completed):

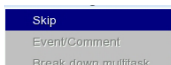



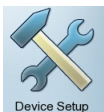



2.4 AutoSave:






















## Measuring with a machine template


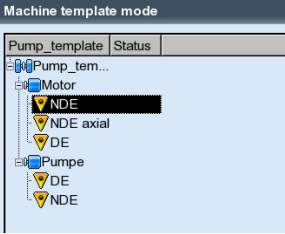
	Switch on VIBXPRT.	<ul style="list-style-type: none"> <li>see section 'Basic functions', p. 12.</li> </ul>
---	--------------------	---


 	Start 'Machine template' mode.	 Machine Template
---	--------------------------------	---


  	Select machine template.	<div style="border: 1px solid black; padding: 5px;"> <p><b>Machine Template</b></p> <ul style="list-style-type: none"> <li>- Fan_template</li> <li><b>Pump_template</b></li> <li>  Maschine 1</li> <li>  Maschine 2</li> <li>- Test Machine Template</li> </ul> </div> <ul style="list-style-type: none"> <li>Machines where measurements have already been carried out appear subordinate to the associated template.</li> </ul>
---	--------------------------	---

  	A: Click on 'Details' and enter the necessary machine data, or	<div style="border: 1px solid black; padding: 5px;"> <p><b>Machine description</b></p> <p>Machine name <input type="text" value="Machine 1"/>   </p> </div>
 	B: confirm the preset machine name with OK, or	<div style="border: 1px solid black; padding: 5px;"> <p><b>Machine description</b></p> <p>Machine name <input type="text" value="Machine 1"/>   </p> </div>
	C: change the machine name in the text editor.	


 	With A: Save machine description.	<div style="border: 1px solid black; padding: 5px;"> <p><b>Customer</b></p> <p><b>ACME Inc.</b>   </p> <p>Model <input type="text" value="SMT 433-4"/>  </p> </div>
---	--------------------------------------	--




	<p>Select measurement location.</p>	 <p>A machine template is set up like a route and resembles a route in operation and workflow.</p>
---	-------------------------------------	---



	<p>Select measurement icon.</p>	<ul style="list-style-type: none"> <li>• see section 'Route'.</li> <li>• Connecting the sensor -&gt; 1.3 (page 17)</li> </ul>
---	---------------------------------	---



	<p>Start measurement.</p>	<ul style="list-style-type: none"> <li>• see section 'Route'.</li> </ul>
---	---------------------------	--

## Measuring a route with VIBCODE

	Switch on VIBXPERT.	<ul style="list-style-type: none"> <li>• see section 'Basic functions', p. 12.</li> </ul>
---	---------------------	---

 	Start 'Route' mode.	
---	---------------------	---

  	Select route.	
---	---------------	--

	Connect the VIBCODE transducer to the VIBCODE measurement location.	 <ul style="list-style-type: none"> <li>• Measurements start automatically, if the location is found in the route.</li> <li>• If the meas. location is in the VIBCODE pool: First measurement starts automatically, all other measurements must be triggered manually with the 'Enter' key.</li> </ul>
---	---	---





---

Printed in Germany LIT 53.101.EN.04.2012

VIBXPERT®, VIBCODE® are registered trademarks of PRÜFTECHNIK Dieter Busch AG. PRÜFTECHNIK products are the subject of patents granted and pending throughout the world. Contents subject to change without further notice, particularly in the interest of further technical development. Reproduction, in any form whatsoever, only upon express written consent of PRÜFTECHNIK.

© Copyright by PRÜFTECHNIK AG





**Faithful companion**

VIBSCANNER® is the ideal partner for your daily measuring and inspection rounds. Integrated transducers record all important machine signals. Process parameters can be supplied as analog signals or entered manually. A checklist of visual inspection tasks, e.g. 'Check oil level', assists in tracing faults. FFT and balancing is also included. Graphic user guidance and intuitive joystick navigation make operating child's play.

VIBSCANNER® – Machine evaluation, data collection & balancing



**Condition monitoring made feasible**

Economical modular components and simple installation make condition monitoring with VIBREX® feasible even for smaller production aggregates. Alarm-activated switching via PLC and direct mA signal output allow machine control and measurement trending by external systems.

VIBREX®: On-site monitoring and control for 1 or 2 locations



**wwwatch me now**

VIBROWEB® lets you monitor and analyze your machine condition from around the globe. It is the first telediagnosis system in the world to take advantage of Internet technology for communication and data transmission. When the situation at hand demands immediate attention, the VIBROWEB® instantly notifies the specialists by eMail or SMS.

VIBROWEB®: Telediagnosis via Internet & mobile phone

**Productive maintenance technology**

PRÜFTECHNIK  
 Condition Monitoring GmbH  
 Oskar-Messter-Str. 19-21  
 85737 Ismaning, Germany  
 www.pruftechnik.com  
 Tel.: +49 89 99616-0  
 Fax: +49 89 99616-300  
 eMail: info@pruftechnik.com  
 www.pruftechnik.com



A member of the PRÜFTECHNIK group